

INSTALLATION INSTRUCTIONS

Item#15037-XXX

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

HANGING THE FIXTURE (Fig. 1)

1. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
2. Shut off power at the circuit breaker and remove old fixture including the mounting hardware.
3. Remove screws (C) (Size: #8-32 0.5") from canopy (G). Position the mounting plate (D) on the ceiling and mark the location of the two drywall anchors. Pre-drill the holes for the drywall anchors. Then insert the drywall anchors into the ceiling.
4. Secure mounting plate (D) to junction box (not included) using mounting screws (F) (Size: #8-32 1") and wood screws (E). The side of the mounting plate marked "GND" must face out.
5. Start from the wire exit side: Install glass (O) and glass (P) secured with ring (N), then fasten the metal ring (Q) with screws (V) onto fixture body (L). Finally, secure glass (R) onto metal ring (Q). Do not over tighten. Please follow the sequence shown in Fig.1.
6. Then proceed from the other side in the following sequence: Install glass (M), glass (O), and glass (P) with ring (N) and fixture body ring (K) respectively. Then fasten metal ring (Q) to secure glass (P) with screws (V) onto fixture body (L). Finally, secure glass (R) onto metal ring (Q). Do not over tighten. Please follow the sequence shown in Fig.1.
7. Loosen hex nuts (U) on canopy (G) by wrench (T) (not included), take apart lock washer (Y), metal washer (W), canopy (G) and swivels (H).
8. Determine the desired hanging height and thread rods (I, J) to all thread of the fixture body ring (K). Pass the wires carefully through each rod as you assemble. Then secure swivel (H) onto rod (I).
9. Align canopy (G) followed by metal washer (W) and lock washer (Y) onto swivels (H) and secure with hex nuts (U). Carefully feed the wire through the swivel (H).
10. Use the quick connector to connect the LED red/black wires to the red/black wires on the driver as shown in Fig.1.
11. The support cable is provided to support the weight of the fixture while wiring. Align the fixture to mounting plate (D) and attach hook (S) on the end of support cable into a slot located on mounting plate (D). Carefully allow the support cable to support the weight of the fixture while wiring.

CONNECTING THE WIRES (Fig. 2)


12. Connect the electrical wires as shown in fig 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate (D) using the green screw provided.
13. Tuck the wire connectors neatly into the ceiling junction box.

FINISH THE INSTALLATION (Fig. 1)

14. Place canopy (G) onto mounting plate (D) and secure with screws (C).

Your installation is now complete. Return power to the junction box and test the fixture.

Fig.1.

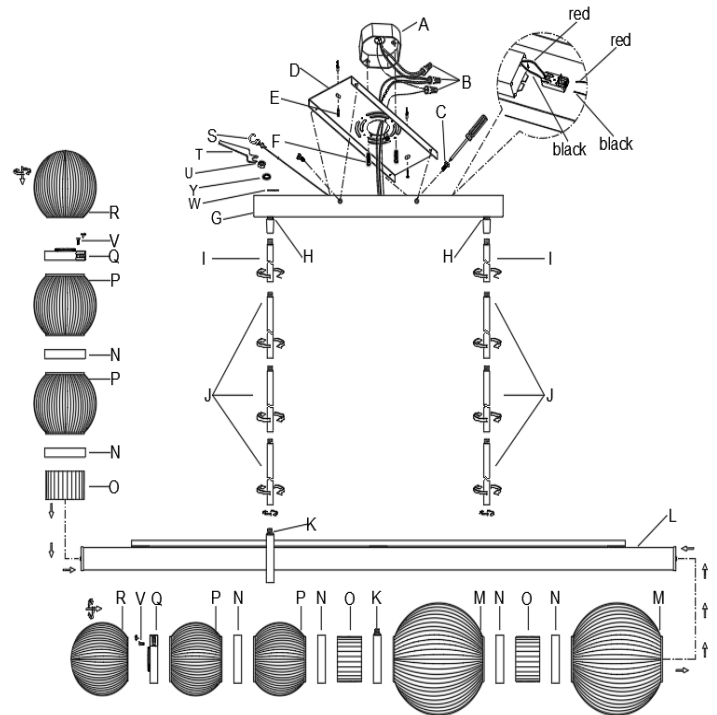

Set# A-022-


- Mounting Plate
- Ground Screw
- Mounting Screw*2

Rod#

W30-H-732*2(I) ; W30-H-899*2(I)

W30-1-732*6 (J); W30-1-899*6 (J)

Fig. 2

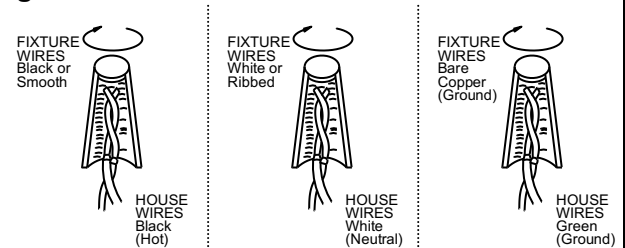

Note: Illustration (Fig.1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Noted: Carefully inspect each glass to ensure they are properly installed and secure, free from scratches or damage, guaranteeing a safe and aesthetically pleasing installation.

IMPORTANT: FIXTURE SHOULD BE INSTALLED BY A QUALIFIED ELECTRICIAN TO ENSURE PROPER WIRING AND INSTALLATION.

Dimmable with ELV and/or LED compatible wall dimmer switches