

INSTALLATION INSTRUCTIONS

Item# 3404-613 (New. 02/25/2016)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

PREPARING FOR INSTALLATION (Fig. 3)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the old fixture including the mounting hardware.
2. Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.
3. Position the mounting plate (A) on the ceiling, and mark location of the four mounting holes. Drill the holes on the wall, and then insert the plastic anchors (K).
4. Attach the mounting plate (A) to the junction box using mounting screws (B) (Size: #8-32N*L0.5"). The side of the mounting plate marked "GND" must face out.
5. Secure the mounting plate (A) by inserting the wood screws (L) through the holes on the mounting plate into the plastic anchors (K).

MOUNTING THE FIXTURE (Fig.1)

6. Use proper chain pliers to open one end link of the chain and connect to the fixture loop (F). Then close the link.
7. By measuring, determine the correct number of links needed for the desired hanging height. Using the chain pliers, disconnect and discard the excess chain (E).
8. Carefully lace the fixture wires through the chain (E).
9. Open the other end of the chain (E) and attach it to the ceiling loop. Then close the chain (E).
10. Carefully feed the fixture wires through the loop (D) and nipple and pull tight.

CONNECTING THE WIRES (Fig. 2)

11. At this point, connect the electrical wires as shown in Fig. 2 making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the crossbar using the green screw provided.
12. Place the canopy (C) over the mounting plate (A) and secure it with screws (M).


FINISHING THE INSTALLATION (Fig. 3)

13. Place glass shade (H) over socket and secure with screw shell (I).
14. Install the light bulb (not included) in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).**

Your installation is now complete. Return power to the outlet box and test the fixture.

Note: Illustration (Fig. 3) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.


Fig. 1

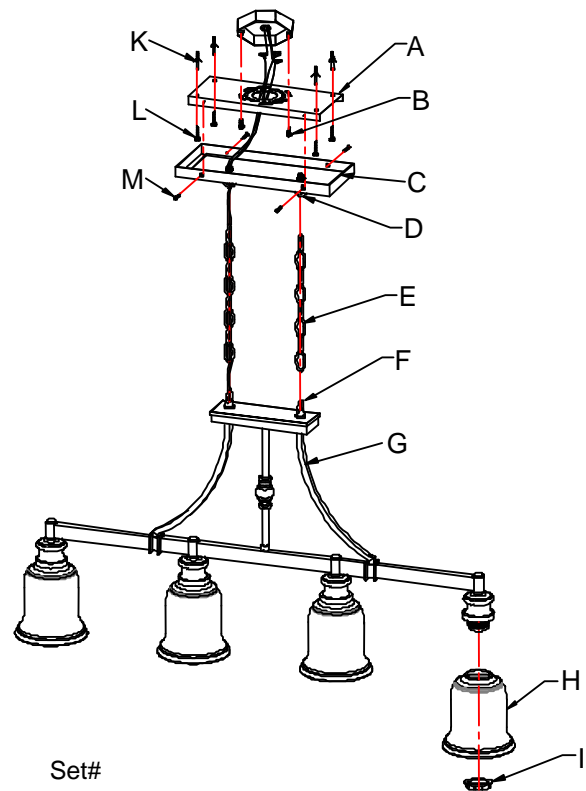

Set#

Chain#HCH2072-613

Fig. 2

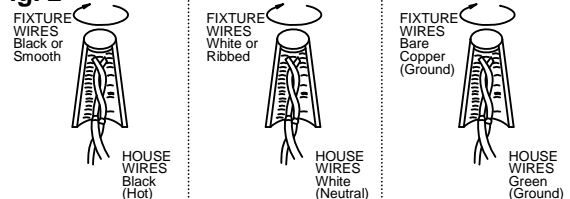

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

