

# INSTALLATION INSTRUCTIONS FOR FIXTURE #4101-172/84

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**  
**AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

## ASSEMBLING THE FIXTURE (FIG. 1)

1. Shut off the power supply at the fuse box or circuit breaker. If necessary, remove the old fixture from ceiling including the mounting hardware.
2. Carefully remove the new fixture from the packaging and check that all parts are included as shown in the illustration.
3. Determine the desired hanging height and thread tubes (H) to the nipple (I) on the fixture body. Pass the wires carefully through each tube as you assemble.
4. Then thread the top end of the tubes (H) snug onto the nipple (G) of the swivel (F).
5. Place the large glass shade (K), check ring (L), small glass shade (M) over the socket (J) in this order. Then secure with cushion ring (N) and socket ring (O) using the socket ring tool (P).
6. Install the light bulb (not included) in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).**

## MOUNTING THE FIXTURE (Fig. 1)

7. Attach the cross bar (A) to the outlet box using the outlet box screws (C). The side of the cross bar marked "GND" must face out.
8. Attach the fixture body onto the cross bar (A) by protruding 2 mounting screws (B) through the mounting holes of the canopy (D) and secure with ball nuts (E).

## CONNECTING THE WIRES (Fig. 2)

1. At this point, connect the electrical wires as shown in figure 2, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the ground wire from the fixture to it. Otherwise, connect the fixture's ground wire directly to the cross bar using the green screw provided.
2. After wires are connected, tuck them carefully into the ceiling junction box.

Your installation is now complete. Return power to the outlet box and test the fixture.

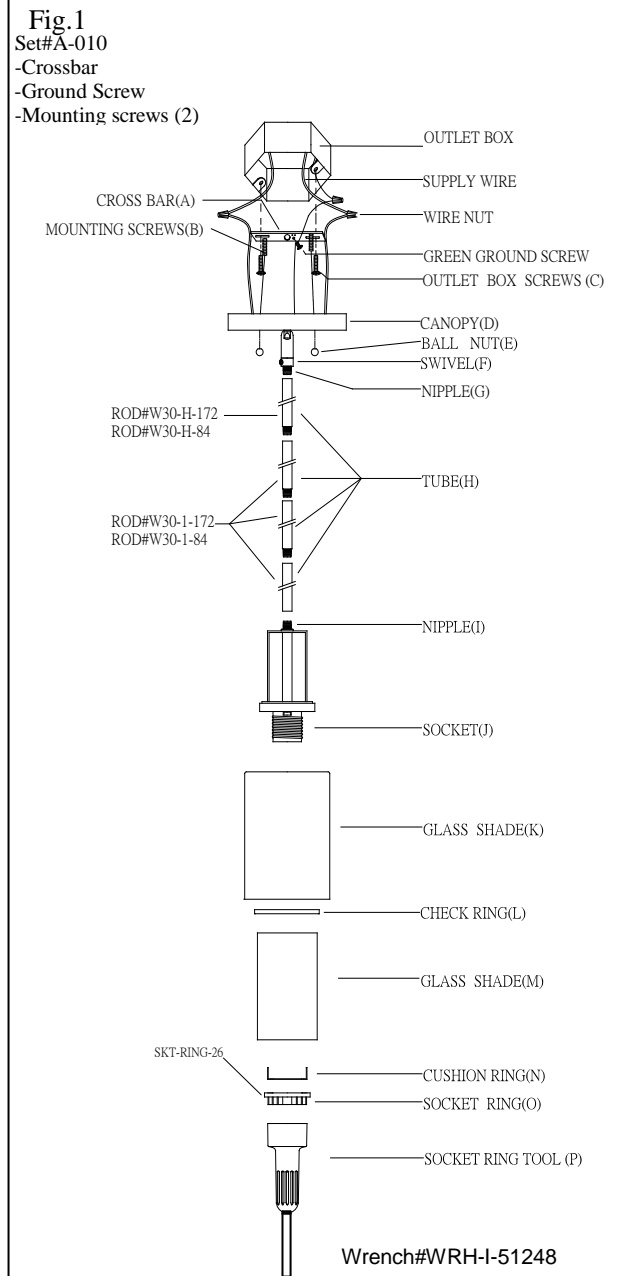


Fig .2		
<b>FIXTURE WIRES</b> Black or Smooth	<b>FIXTURE WIRES</b> White or Ribbed	<b>FIXTURE WIRES</b> Bare Copper (Ground)
<b>HOUSE WIRES</b> Black (Hot)	<b>HOUSE WIRES</b> White (Neutral)	<b>HOUSE WIRES</b> Green (Ground)

