

INSTALLATION INSTRUCTIONS

For Model 4394

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig.3)

1. Shut off power at the circuit breaker and remove old fixture, including the crossbar.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Thread fixture loop (I) onto stud of the fixture until tight.
4. Attach glass (L) to the inner side of fixture arm (M), align the holes, then secure by threading the two screws (K) with plastic washer (J) until snug. Repeat for the other panels.
5. Install the bulbs in accordance with the fixture's specification. (DO NOT EXCEED THE MAXIMUM WATTAGE RATING!!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).

HANGING THE FIXTURE (Fig.1)

6. Thread nipple (C) into ceiling loop (E) until snug.
7. Place lock washer (B) over end of nipple (C) protruding through crossbar (F) and thread hex nut (A) onto nipple (C) until tight. Take this crossbar (F) assembly and mount to ceiling outlet box with outlet box screws (G). Tighten screws securely with screwdriver. The side of the crossbar marked "GND" must face out.
8. Use a pair of pliers to open one end link of the chain provided and connects to the fixture loop (I). Close the link.
9. By measuring, determine correct number of links needed for proper hanging height. Using pliers disconnect and discard remaining chain.
10. Lace the fixture wires through the chain.
11. Slip loop collar (H) over the chain, then do the same with canopy (D).
12. Open the other end link of the chain and connects to the ceiling loop (E). Close the link.
13. Feed the fixture wires through the loop (E) and nipple (C) and pull until taut.

CONNECTING THE WIRES (Fig. 2)

14. At this point, connect the electrical wires as follow, take the black wire from the outlet box and the smooth wire leg from the fixture and twist bare ends together. Twist wire connector onto end of wire until snug. Repeat same process with white outlet box wire and ribbed wire leg of fixture wire. NOTE: Twist wires together in the same direction you twist the wire connector onto wires. If your outlet has a ground wire (green or bare copper) connects fixture's ground wire to it. Otherwise connect fixture's ground wire directly to the crossbar using the green screw provided.
15. Tuck these wire connections neatly into the ceiling outlet box and then raise the canopy (D) all the way to the ceiling. Raise the lock collar (H) and thread onto ceiling loop (E) protruding through canopy (D).

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig.1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Fig.1

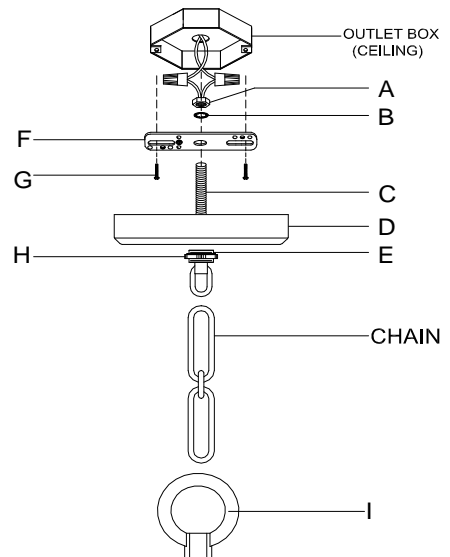


Fig.3


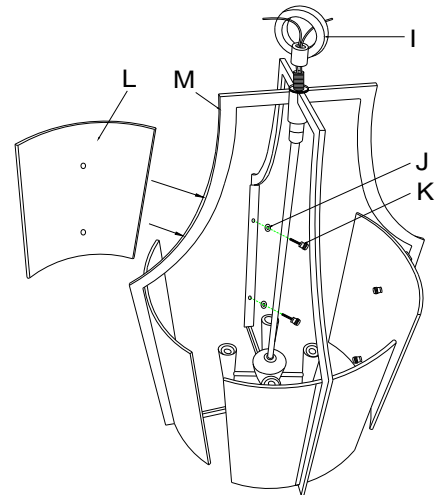


Fig. 2



Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

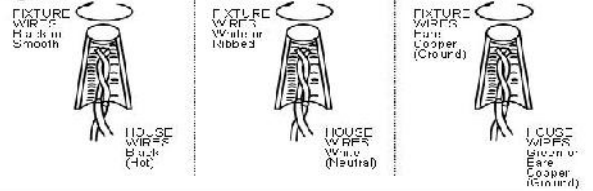

LA-1927E