

INSTALLATION INSTRUCTIONS

Item#4879-283 (New. 05/ 10/ 2014)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig.2)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the existing fixture and its mounting hardware from the ceiling.
2. Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.
3. Remove the screw (K), and remove the outer frame (N).
4. Insert glass (L) into the outer frame (N), and secure the glass with clips (M).
5. Place the fixture body (J) into the outer frame (N), and secure with screws (K). **Secure fixture loop (I) to nipple on top of the fixture body (J).**
6. Install the light bulb (not included) in accordance with the fixture's specifications: **DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**

HANGING THE FIXTURE (Fig.1)

1. Thread nipple (C) into ceiling loop (F) until snug.
2. Thread the other end of nipple (C) with loop attached into crossbar (D) until snug.
3. Place lock washer (B) and hex nut (A) over end of nipple protruding through crossbar. Then thread hex nut (A) until snug.
4. Take this crossbar assembly and mount to the ceiling outlet box using outlet box screws (E) (**Size: #8-32N*L0.5"**). The side of the crossbar marked "GND" must face out.
5. Using a pair of chain pliers, open one end link of the chain and connect to the fixture loop (I). Then close the link.
6. Carefully lace the fixture wires through the chain.
7. By measuring, determine the correct number of links needed for the desired hanging height. Using the chain pliers disconnect and discard the excess chain.
8. Slip the lock collar (H) and canopy (G) over the chain, allowing them to rest onto the fixture loop (I).
9. Open the other end link of the chain and attach it to the ceiling loop (F). Then close the link.
10. Feed the fixture wires through the ceiling loop (F) and nipple (C) and pull tight.

CONNECTING THE WIRES (Fig.3)

11. At this point, connect the fixture wires as shown in Fig.3, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the crossbar (D) using the green screw provided.
12. Tuck these wire connections neatly into the ceiling outlet box and raise the canopy (G) to the ceiling. Then raise the lock collar (H) and thread onto the ceiling loop (F) protruding through the canopy.

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig.1) (Fig.2) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

CHAIN HUNG FIXTURE INSTRUCTION

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.



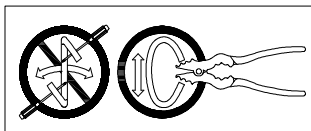


Fig.1

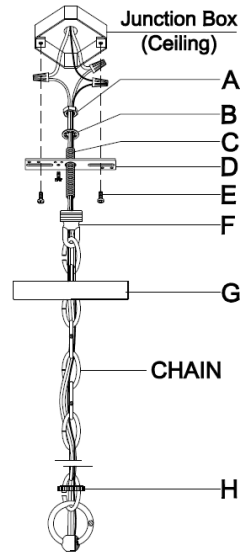

Set# A-016
- Crossbar
- Ground Screw
- Mounting Screw*2

Fig.2

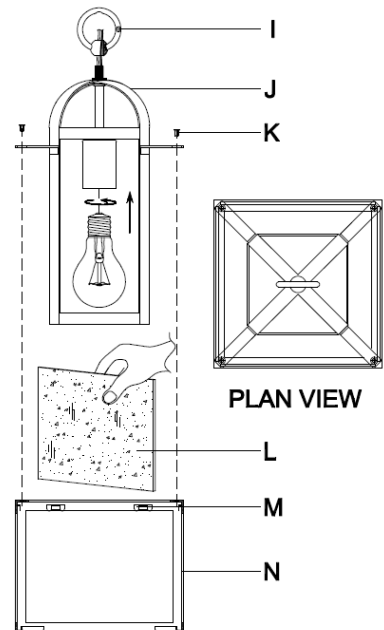

Chain # HCH2072-283

Gauge D3.8mm

Fig.3

FIXTURE WIRES Black or Smooth		FIXTURE WIRES White or Ribbed		FIXTURE WIRES Bare Copper (Ground)	
HOUSE WIRES Black (Hot)		HOUSE WIRES White (Neutral)		HOUSE WIRES Green or Bare Copper (Ground)	