#### INSTALLATION INSTRUCTIONS

For Model 6163-PL

#### **READ AND SAVE THESE INSTRUCTIONS**

# WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

## AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

## **MOUNTING THE FIXTURE (Fig. 1)**

- 1. Shut off the power at the circuit breaker and remove old fixture, including the mounting hardware.
- 2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
- 3. Secure the circular strap (B) using Screw (D) to the Outlet Box (A). The side of the circular crossbar marked "GND" must face out.
- 4. Screw Studs (C) into the screw hole of the circular strap (B).

#### **CONNECTING THE WIRES (Fig. 2)**

5. At this point, connect the electrical wires as follows; connect the black wire from the fixture to the black house (hot) wire. Connect the white wire from the fixture to the white (neutral) house wire. Make sure all wire nuts are secured. You may wrap the connections with electrical tape. If your outlet has a ground wire (green or bare copper), connect fixture's ground wire to it. Otherwise connect fixture's ground wire directly to the circular strap using the green screw provided. (Fig. 2)

## **FINISHING THE INSTALLATION (Fig. 1)**

- 6. Place Fixture Body (F) into two Studs (C) and secure it tightly using Knurled Knobs (E)
- 7. Install the CFL bulbs (H) (included) into socket in accordance with the fixture's specification. (DO NOT EXCEED THE SPECIFIED WATTAGE!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).
- 8. The ballast in each of these models can be replaced by a qualified electrician without cutting of wires and without damage to the housing, trim, decorative elements or carpentry to which the fixture is attached. The ballast and lamp are combined, to replace or install, twist pins into socket as shown Fig 3.

Your installation is now complete. Return power and test the fixture.

Note: Illustration (Fig.1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

This fixture is rated for a minimum start temperature of 0 degrees Fahrenheit (-17 degree Celsius).

The color correlated Temperature (CCT) for replacing the enclosed lamp is (2700K).

<u>Caution</u>: CFLs contain Mercury (Hg) Dispose of according to Local, State and Federal Law. (www.epa.gov/bulbrecycling)







