

INSTALLATION INSTRUCTIONS

For Model 71224-143

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

HANGING THE FIXTURE (Fig. 1)

1. Shut off the power at the circuit breaker and remove the old fixture, including the mounting hardware. Carefully unpack your new fixture and lay out all the parts on a clear area. **Be careful** not to lose any small parts necessary for installation.
2. Thread the 2 mounting screws (B) into the mounting plate (C) spaced the same distance apart as the holes in the fixture canopy (D). (You can adjust the length of the screws if necessary.)
3. Attach the mounting plate (C) to the outlet box (not supplied) with mounting screws (A). (Size: #8-32*0.78"L). Tighten screws securely with screwdriver. The side of the mounting plate (C) marked "GND" must face out.
4. Use a pair of pliers to open one end link of the chain provided and connects to the fixture loop (I). Close the link. By measuring, determine correct number of links needed for proper hanging height. Using pliers disconnect and discard remaining chain.
5. Lace the fixture wires through the chain. Open the other end link of chain and hang the fixture on the loop at the ceiling. Close the link. Feed the fixture wires through the loop (K) and pull until taut.
6. **Carefully take off the glass shade (H) by loosening two screws (G) and the bottom plate (F), install the bulb (E12-Candelabra base, not supplied) in accordance with the fixture's specification.**

CONNECTING THE WIRES (Fig. 2)

7. At this point, connect the electrical wires as follow:

Connect the smooth wire from the fixture to the black (hot) house wire. Connect the ribbed wire from the fixture to the white (neutral) house wire. Make sure all wire nuts are secured. You may wrap the connections with electrical tape. If your outlet has a ground wire (green or bare copper). Connect fixture's ground wire to it. Otherwise, connect fixture's ground wire directly to the crossbar using the green screw provided. Tuck the wire connections neatly into the ceiling junction box.

8. Align fixture canopy (D) to mounting plate (C) and secure with cap nuts (E).
9. **Attach the glass (H) and bottom plate (F) back to the fixture (I) by two screws (G)**

DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)

Your installation is now complete. Return power to the junction box and test the fixture

Fig. 1


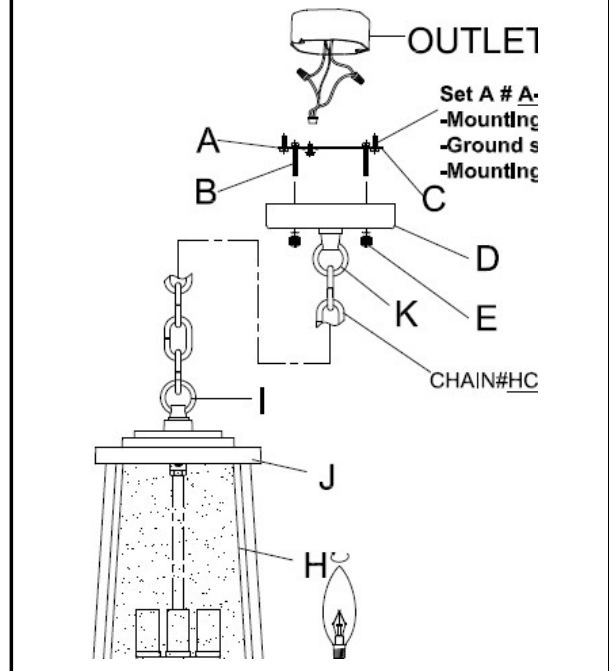


Fig. 2



Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

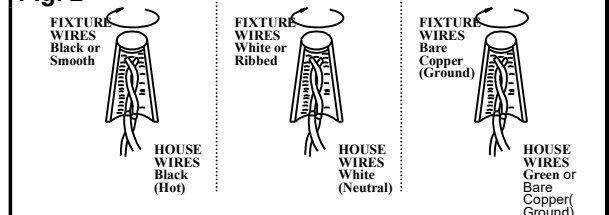