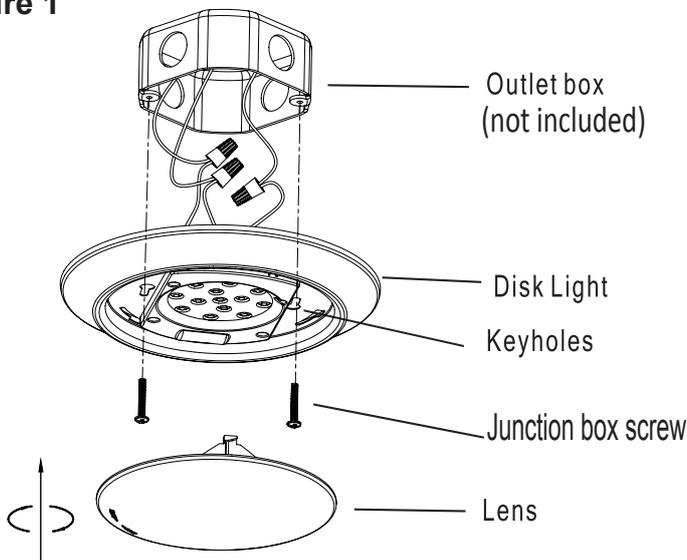


## HOUSING INSTALLATION


**Figure 1**

For 4 inch outlet box




**Figure 2**

For 3 inch outlet box

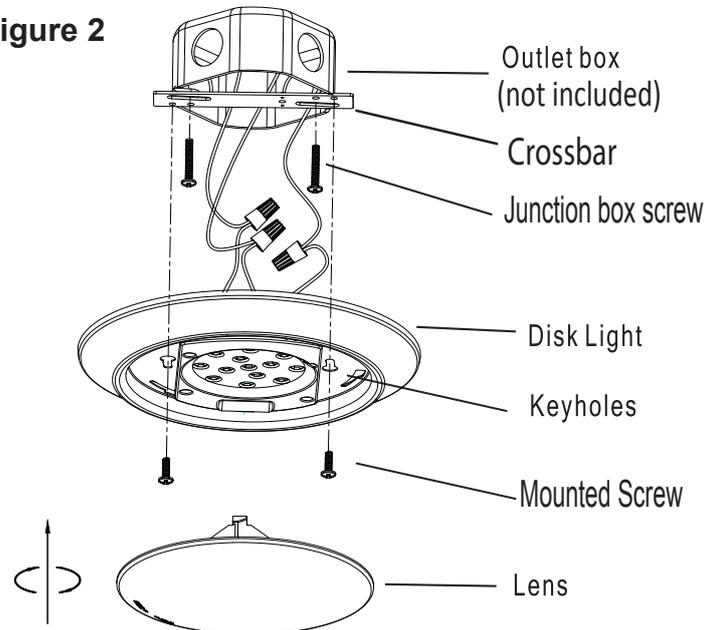

### INCLUDED ACCESSORIES BAG

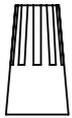

Wire Nut  
Qty: 3 pcs  
P3




#8-32 x 3/8"  
Qty: 2 pcs  
Mounted Screws



#8-32 x 1"  
Qty: 2 pcs

Junction Box Screw  
Stainless Steel

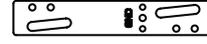

Crossbar  
Qty: 1 pc

MINKA PART# A-012-1

### FOR YOUR SAFETY

**WARNING:** Before you begin installing the fixture, shut power off at the circuit breaker. Be cautious and be sure to follow steps in the order given. Under no circumstances should a fixture be hung by electrical wires, nor be installed onto a ceiling containing a radiant type heating system. If you are unclear with the instructions consult with a qualified electrician.

### CARE INSTRUCTIONS

To clean, wipe fixture with a soft cloth. Do not use abrasive materials such as scouring pads or powders, steel wool or abrasive papers.

### INSTALLATION

1. Attach two junction box screws (size: #8-32x 1") into 4" outlet box leaving enough of screw exposed to engage keyholes in the top of disk light (Fig.1).
2. Attach the crossbar by using two junction box screws (size: #8-32x 1") into 3" outlet box, then thread two mounted screws (size: #8-32x 3/8") into the crossbar leaving enough of screw exposed to engage keyholes in the top of disk light (Fig.2). Make sure the side of crossbar marked "GND" must face out.
3. Provide electrical service according to the "National Electrical Code" or your local electrical code to the outlet box.
4. Connect supply wires to fixture wires and insulate with proper size wire nuts (Fig.1 or Fig.2).
  - a.) Connect incoming ground wire (green or bare) to fixture ground wire (green or bare). If your outlet box do not have a ground wire, connect the fixture ground wire directly to the crossbar using the green screw provided.
  - b.) Connect incoming common (white) wire to fixture common (white) wire.
  - c.) Connect incoming hot (typically black) wire to fixture black wire.
5. Raise the disk light over the junction box screws through the key holes, rotate the disk light until the junction box screws are in the slots of the keyholes and secure the disk light with the two junction box screws. (Fig.1 for 4 inch outlet box)
6. Raise the disk light over the mounted screws through the key holes, rotate the disk light until the mounted screws are in the slots of the keyholes and secure the disk light with the two mounted screws. (Fig.2 for 3 inch outlet box)
7. Twist the lens on disk light metal enclosure and lock the lens in place.

**Dimmable with ELV and/or LED compatible wall dimmer switches.**

**MIN 90°C SUPPLY CONDUCTORS.**

## TECHNICAL SPECIFICATIONS

Model Number	739-2-44-L/739-2-84-L
Wattage	13W
Input voltage	120V,60Hz
Lumens	1000Lm/950Lm
CCT	3000K
CRI	>90Ra