

# INSTALLATION INSTRUCTION

For Outdoor Lantern (Rev. 06/07/2012)

READ AND SAVE THESE INSTRUCTIONS

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**  
**AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

## PREPARATION (Fig. 1)

1. Shut off power at the fuse box or circuit breaker box. If necessary, remove old fixture and all mounting hardware from wall junction box.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Attach the Circular Strap (A) to the junction box with the two Junction box screws (B) (Size: #8-32N\*L0.5") as shown. The side of the Circular Strap marked "GND" must face out.
4. Thread the Studs (C) into the pre-drilled holes in the Circular Strap (A) spaced the same distance apart as the holes in the Back-plate.

## CONNECTING THE WIRES (Fig. 2)

5. Connect the fixture wires to the junction box wires as shown in the wiring diagram. Making sure all wire connectors are secured and do not easily pull off with a slight tug. If your outlet has a ground wire, connect the fixture ground wire to it. If there is no Green Ground wire from the junction box, connect the Fixture Ground Wire to the circular strap with the green Screw provided.

## COMPLETING THE INSTALLATION

6. Thread Back plate (D) onto Studs (C) and secure with Knurled Knobs (E).
7. To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. Indoor/Outdoor Silicone Sealant) to outline the outside of fixture back-plate where it meets the wall leaving a space at bottom to allow moisture a means to escape (Fig.3).
8. Install the PL bulb (H) (included) into socket (F) in accordance with the fixture's specification. **(DO NOT EXCEED THE SPECIFIED WATTAGE!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**
9. Screw Glass Shade (I) tightly onto Fixture Body (G) by twisting it clockwise as shown in (Fig.1).
10. The ballast in each of these models can be replaced by a qualified electrician without cutting of wires and without damage to the housing, trim, decorative elements or carpentry to which the fixture is attached. The ballast and lamp are combined, to replace or install, twist pins into socket as shown on Fig 4.
11. This fixture is rated for a minimum start temperature of 0 degrees Fahrenheit (-17 degree Celsius).
12. This fixture is ETL Listed for Wet Location applications.

Your installation is now complete. Return the power to the junction box and test the fixture.

**Note:** Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

The color correlated Temperature (CCT) for replacing the enclosed lamp is (2700K).

**Caution:** CFLs contain Mercury (Hg) Dispose of according to Local, State and Federal Law. ([www.epa.gov/bulbrecycling](http://www.epa.gov/bulbrecycling)).

