

INSTALLATION INSTRUCTIONS

Model # 9194-PL

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

1. Shut off the power at the fuse box or circuit breaker box and remove old fixture from ceiling, including the old crossbar.
2. Carefully unpack your new fixture and lay out all the parts in a clear area. Take care not to misplace any small parts necessary for installation.
3. Thread nipple (I) into ceiling loop (D) until snug.
4. Thread other end of nipple (I) with loop(D) attached into single bar (H) until snug.
5. Place lock washer (G) over end of nipple (I) protruding through crossbar and thread hex nut (F) onto nipple(I) until tight.
6. Take this single bar assembly and mount to ceiling outlet box (A) with outlet box screws (C). Tighten screws securely with screwdriver.
7. Unscrew the link (L) open on the end of the chain (E), attach the Link (L) to the fixture's Loop (M), close the Link (L). Slip Loop Collar (K) followed by the Canopy over the chain. Open the other end link of the Chain (E) and lift the fixture to attach to the ceiling loop (D), close the chain link.
8. By measuring determine correct number of links needed for proper hanging height. Using a pair of proper chain pliers disconnect and discard remaining chain.
9. Lace the fixture wires through the chain.
10. Slip the chain, then do the same with the canopy (J).
11. Open the other end link of the chain (E) and hang the fixture on the loop at the ceiling. Close the link.
12. Feed the fixture wires through the Loop (D) and nipple (I) and pull until taut.
13. At this point, connect the electrical wires as shown in Fig. 2. Making sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), attach this wire and the bare copper wire from the fixture together. Otherwise, attach the bare copper fixture wire to the crossbar using the green screw (B) provided.
14. Tuck these wire connections neatly into the ceiling outlet box and then raise the canopy (J) all the way to the ceiling. Raise the loop collar (K) and thread onto ceiling loop protruding through canopy (J).
15. At this point, install 1*13W/GU24/PL bulb (one bulb included) in accordance with the fixture's specification. —**DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**
16. The ballast in each of these models can be replaced by a qualified electrician without cutting of wires and without damage to the housing, trim, decorative elements or carpentry to which the fixture is attached. See Fig.3 for more detail.
17. Replace the bottom glass (N) and secure with the screws (P) with the rubber washer (O), then replace the decorative arm(S), secure the allen screws (Q) by the tool (R).
18. Contains Mercury (HG) Dispose of according to Local, State and Federal Law. (www.epa.gov/bulbrecycling).

Your installation is now complete. Return power to the outlet box and test the fixture.

Fig. 1

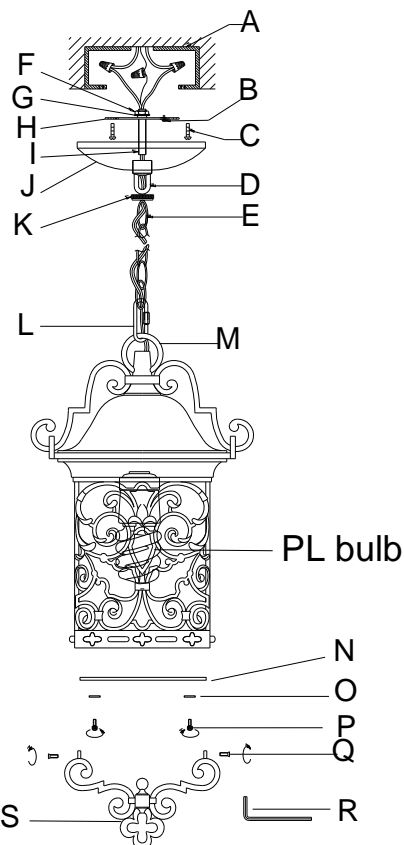


Fig.2


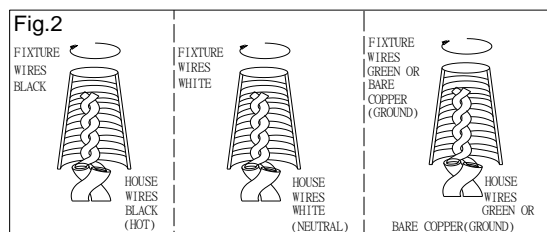


Fig.3

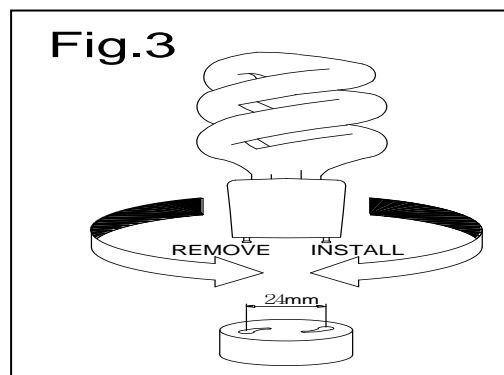

“CAUTION-RISK OF FIRE CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR”

ATTENTION – RISQUE D'INCENDIE. CONSULTER UN ÉLECTRICIEN QUALIFIÉ POUR VOUS ASSURER QUE LES CONDUCTEURS DE LA DÉRIVATION SONT ADÉQUATS.

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

© Minka Lighting Inc.

This product is protected by United States Federal and/or State Law, including Patent and/or Copyright laws.