



Seressa

INSTRUCTION MANUAL WARRANTY CERTIFICATE

©2025 Minka Lighting, LLC. Manual design and all elements of manual design are protected by United States Federal and/or State Law including

Patents, Trademark, and/or Copyright Laws.



The Minka-Aire® warranty is for one (1) year from the date of purchase from an authorized Minka-Aire® dealer. This warranty is only valid to the original purchaser or user against all defects in material and workmanship (light bulbs excluded) for one (1) full year. Additionally, Minka-Aire® warrants the motor only for the lifetime of the Minka Aire ceiling fan (excluding wall controls and electrical components), to the original purchaser or user.

- * The warranty is voided with the use of any non- Minka-Aire®electrical devices, E.g., wall controls or electrical dimmer switches, etc...
- * The warranty is void once the original purchaser or user ceases to own the fan or the fan is moved from its original point of installation.
- * The warranty is void with the use of any hanger bracket (non-Minka Aire or non-fan specific) other than the hanger bracket supplied & installed with this specific fan.

Warranty Service Information

To obtain warranty service during the warranty period, the purchaser should return the fan with the sales receipt to the original place of purchase. The authorized Minka-Aire® dealer, at its sole discretion, will either repair or replace the fan after verifying the legitimacy of the warranty claim. Replacement is subject to availability of the same model. If the model is unavailable it will be replaced by one of equal value. This is a limited warranty; the original purchaser or user is responsible for the cost of removal and reinstallation of repaired or replacement product.

To obtain the name of the Minka-Aire® authorized dealer nearest you call the Minka-Aire® customer care department at 1-800-307-3267, or contact Minka-Aire® through www.minkagroup.net and select FAQ to answer any questions or if you require additional assistance submit the question form found there.

Date Purchased _____ Store Purchased ____ Model Number ____ F793L

SAFETY RULES1	INSTALLING THE LED ASSEMBLY AND BOTTOM COVER8
PACKAGE CONTENTS2	OPERATING THE REMOTE CONTROL/WALL CONTROL9
INSTALLING THE FAN3	ENJOY YOUR SMART CEILING FAN10
HANGING THE FAN4	CARE OF YOUR FAN11
ELECTRICAL CONNECTIONS5	TROUBLESHOOTING12
FINISHING THE INSTALLATION6	SPECIFICATIONS13
ATTACHING THE FAN BLADES7	









- SAFETY RULES

 1. Before you begin installing the fan, shut power off at the circuit breaker of the fuse box.
- 2. Be cautious! Read all instructions and safety information before installing your new fan, Review accompanying assembly diagrams.
- 3. Make sure that all electrical connections comply with local codes, ordinances, or National Electrical Codes. Hire a qualified electrician or consult a do-it-yourself wiring handbook if you are unfamiliar with installing electrical wiring.
- 4. Make sure the installation site you choose allows the fan blades to rotate without any obstructions. Allow a minimum clearance of 7 feet from the floor and 18 inches from the tip of the blades to the wall.
- 5. If you are mounting the fan to a ceiling fan outlet box, use a U.L. Listed metal octagonal outlet box marked 'Acceptable for Fan Support'. Secure the box directly to the building structure. The outlet box and its support must be able to support the moving weight of the fan (at least 50 pounds) Do not use a plastic box.
- 6. Caution: To reduce the risk of injury use only the screws provided with the outlet box in conjunction with the lock washers provided with the fan.
- 7. If you are mounting the fan to a joist, make sure it is able to support the moving weight of the fan (at least 50 pounds).
- 8. After you install the fan, make sure that all mounting components are secured to prevent the fan from falling.
- 9. Do not insert anything into the fan blades while the fan is operating.
- 10. Turn the fan off and wait for the blades to stop completely before proceeding with maintenance or cleaning.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors which can not be built into this product. These factors must be supplied by the person (s) installing, caring for and operating the unit.

NOTE: READ AND SAVE ALL INSTRUCTIONS!

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR OTHER PERSONAL INJURY, MOUNT FAN ONLY TO A U.L. LISTED OUTLET BOX OR SUPPORTING SYSTEM MARKED ACCEPTABLE FOR FAN SUPPORT AND USE MOUNTING SCREWS PROVIDED WITH THE OUTLET BOX IN CONJUCTION WITH THE LOCK WASHERS PROVIDED WITH THE FAN. MOST OUTLET BOXES COMMONLY USED FOR FAN SUPPORT OF LIGHTING FIXTURES ARE NOT ACCEPTABLE FOR FAN SUPPORT AND NEED TO BE REPLACED. CONSULT A QUALIFIED ELECTRICIAN IF IN DOUBT.

TO REDUCE THE RISK OF PERSONAL INJURY, DO NOT BEND THE BLADE HOLDERS WHILE INSTALLING, BALANCING THE BLADES OR CLEANING THE FAN . DO NOT
INSERT FOREIGN OBJECTS BETWEEN ROTATING FAN BLADES.


TO REDUCE THE RISK OF FIRE OR ELECTRONIC SHOCK, THIS FAN CAN ONLY USE FR-L787NRZW-01 SOLID-STATE SPEED CONTROL WITH UC70846T REMOTE CONTROL ONLY

PACKAGE CONTENTS

Unpack your fan and check the contents. You should have the following items:

- 1. Fan blades (5)
- 2. Blade support plates (5)3. Hanger bracket
- 4. Canopy
- Canopy cover
- 6. Downrod assembly
- 7. Coupling cover8. Fan motor/housing assembly
- 9. LED assembly
- 10. Bottom cover
- 11. Receiver
- 12. Remote control with holder and 2 mounting screws

- 13. 1.5V AAA battery (2)
- A. Mounting hardware: #10 x 1.5" Wood screws (2 PCs.)
- #8 x 3/4" Machine screws (2PCs.)
 Lock washers (2 PCs.)
 4mm Star washers (2 PCs.)
 - Wire nuts (9 PCs.), Washers (2 PCs.)
- B. Blade attachment hardware: 1/4" x 30mm Screws (11PCs.)
- C. Balancing Kit

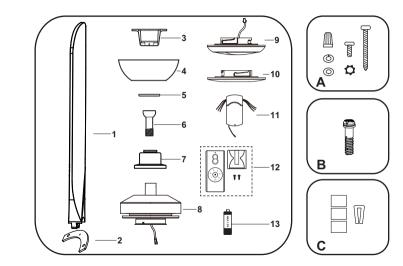

Tools Required: Phillips screw driver; slotted screw driver; step-ladder; wire cutters; electrical tape.

MOUNTING OPTIONS

If there isn't an existing mounting box, then read the following instructions. Disconnect the power by removing fuses or turning off circuit breakers.


Secure the outlet box directly to the building structure. Use appropriate fasteners and building materials. The outlet box and its support must be able to fully support the moving weight of the fan (at least 50 lbs.). Use a UL Listed metal outlet box. Do not use a plastic outlet box.


Figure 1, 2 and 3 are examples of different ways to mount the outlet box.


NOTE: You may need a longer downrod to maintain proper blade clearance when installing on a steep, sloped ceiling. Longer downrods are available from your Minka-Aire®dealer.


To hang your fan where there is an existing fixture but no ceiling joist, you may need to install a hanger bar as shown in Fig. 4 (available at your Minka-Aire®dealer).

    INSTALLING THE FAN









4) HANGING THE FAN

WARNING: All of the parts, hardware and components such as the hanger bracket and hanger ball have been provided for your safety and the proper installation of your new ceiling fan. The use of other parts, hardware or components not supplied by Minka Aire® with the fan will void the Minka Aire® Warranty.

REMEMBER to turn off the power. Follow the steps below to hang your fan properly:

Step 1. Secure the Hanger Bracket to the ceiling outlet box using the screws provided with your outlet box in conjunction with the lock-washers provided with the fan. (Fig. 5)


Step 2. Loosen the two Set Screws and remove the Hitch Pin and Lock Pin from the coupling located on the top of the Motor Assembly. (Fig. 6)


Step 3. Remove the Hanger Ball from the Downrod Assembly by loosening the Set Screw and removing the Cross Pin. (Fig. 7)


Step 4. Carefully feed fan wires up through the downrod. (Fig. 8) Thread Downrod into the Coupling until the holes are lined up and secure with the Lock Pin and Hitch Pin previously removed, tighten Set Screws. (Fig. 9)

Step 5. Slip Coupling Cover, Canopy Cover and Canopy onto Downrod. Carefully re-install the Hanger Ball onto the Downrod being sure that it's properly positioned over the Cross Pin and the wires are not twisted, tighten Set Screw. (Fig. 9)

Step 6. Lift the Motor Assembly and place the Hanger Ball into the Hanger Bracket. Rotate the Motor Assembly as needed until the check groove from the Hanger Ball rests firmly over the registration tab from the Hanger Bracket. Motor Assembly should not rotate if this is done correctly. (Fig. 10)

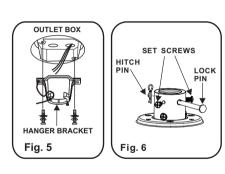

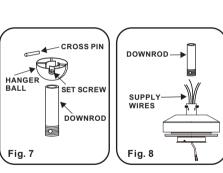

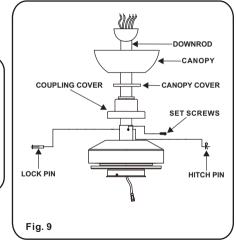




ELECTRICAL CONNECTIONS

WARNING: The use of Dimming devices not compatible with ceiling fans will cause unwanted behavior including loud humming and will cause permanent damage to you fans electrical component.

WARNING: To avoid possible electrical shock be sure electricity is turned off at the main fuse or breaker box before wiring.

NOTE: The Aire Control® System is equipped with a learning frequency function which has 1024 code combinations to prevent potential interference from other remote units. The frequency on your Receiver and Transmitter units have been preset at the factory. (Fig. 11) No frequency change is necessary, should you desire to install another fan within the same home or area with a seperate frequency code please see the "frequency interference" troubleshooting section of this instruction manual to learn how to change the frequency.

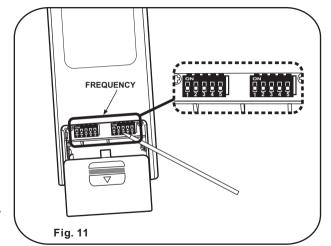

Step 1. Insert Receiver into Hanger Bracket with the flat side of the Receiver facing the ceiling. (Fig.12)

Step 2.Motor to Receiver Electrical Connections: Connect the RED wire from the receiver to the RED wire from motor. Connect the GRAY wire from the receiver to the BROWN wire from motor. Connect the YELLOW wire from the receiver to the WHITE wire (FOR LIGHT) from the receiver to the WHITE wire from motor. Connect the BLUE wire (FOR LIGHT) from the receiver to the BLUE wire from motor. Secure all wire connections with the plastic wire nuts provided. (Fig. 13)


Step 3. Receiver to House Supply Wires Electrical Connections: Connect the WHITE wire (Neutral) from the outlet box to the WHITE wire marked 'AC in N' from the receiver. Connect the BLACK wire(Hot) from the outlet box to the BLACK wire marked 'AC in L' from the receiver. Secure all wire connections with the plastic wire nuts provided.(Fig.13)

Step 4. If your outlet box has a GROUND wire (Green or Bare Copper) connect this wire to the Hanger Ball and Hanger Bracket & Receiver Ground wires. If your outlet box does not have a Ground Wire, then connect the Hanger Ball and Hanger Bracket & Receiver Ground Wires together. Secure wire connection with the plastic wire nut provided. (Fig.13)

After all splices are made, check to make sure there are no loose strands. As an additional precaution we suggest to secure the plastic wire connectors to the wires with electrical tape.

NOTE: Fan must be installed from a maximum distance of 40 feet from the transmitting unit for proper signal transmission between the transmitting unit and the fan's receiving unit.



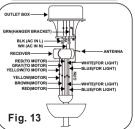



FINISHING THE INSTALLATION

Step 1. loosen the two screws from the bottom of the hanger bracket and one half a turn from the screw head.

Step 2. Slide the canopy up towards the hanger bracket and place the key hole on the canopy over the screw on the hanger bracket, turn canopy until it locks in place at the narrow section of the key holes, secure by tightening the two set screws. (Fig. 14)

NOTE: Adjust the canopy screws as necessary until the canopy and canopy cover are snug.

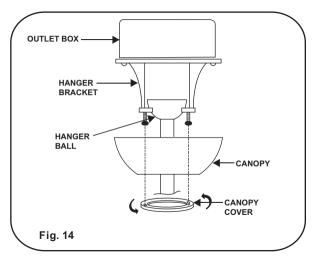

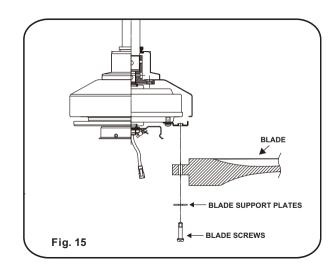

ATTACHING THE FAN BLADES

Align the holes from the blade to the holes from the motor, and secure the blade in place with blade support plate and screws provided. Insert a blade attachment screws into the motor, **but do not tighten**. Repeat for the other screws , **and do not tighten** . (Fig. 15)

Repeat process with other blades. Tighten all blade screws after blades are attached in place.

8

ATTACHING THE LED ASSEMBLY AND BOTTOM COVER


NOTE: Before starting installation, make sure power is turned off at the circuit breaker. Step 1. While holding the LED assembly under the fan motor assembly, make the 2-pin

- wire connections:
 -White to white
- -Blue to blue. (Fig. 16)

Step 2. Raise the LED assembly against the bottom of fan motor assembly and turn clockwise until snug, DO NOT OVERTIGHTEN. (Fig. 16)

NOTE: The bottom cover included with your fan is an option to replace the LED assembly in the event that you prefer not to use the light feature of your fan. The bottom cover is not necessary for the light operation; it can be saved for later use if desired. (Fig.17)

NOTE: This integrated light kit is capable of color changing light of 2700,3000, 3500,4000 and 5000k.

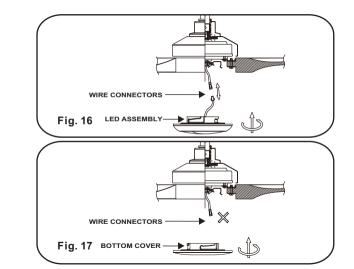

Remote Control only: Install two AAA 1.5 volt batteries (included). To prevent damage to transmitter remove the battery if not used for long periods of time. IMPORTANT: THIS REMOTE CONTROL & DC FAN MOTOR ARE DESIGNED TO PERFORM A ONE TIME SELF CALIBRATION TEST. THIS TEST WILL BEGIN ONCE A NEW CODE HAS BEEN SET, AND WILL LAST APPROXIMATELY ONE MINUTES.

Your DC brushless motor is equipped with a self B. Reverse button: learning frequency function remote control. Restore power to ceiling fan and test the transmitter as below for proper operation:

A. 1, 2, 3, 4, 5 and 6 button:

These six buttons are used to set the fan speed as follows:

- 1 = minimum speed
- 2 = low speed 3 = medium low speed
- 4 = medium speed 5 = medium high speed
- 6 = high speed

This button is used to change the direction of the rotation of the blades: forward for warm weather or reverse for cool weather. C. Button:

This button turns the power Off to the Fan.

powered on.

D. Top Button: This button to select the desired color temperature. NOTE: To change the color temperature of the light press the button once to cycle between

the light temperature. The light must be

This button turns the light ON or OFF and also control the brightness settings of the light.

Press and release the button for the desired light to turn the light ON or OFF. Press and hold the button to set the desired light brightness. The light will cycle between bright and dim settings as long as the button is pressed. The light key has an automatic auto-resume feature that allows the light to remain at the same brightness as the last time it was turned off.

mandate within 60 seconds when turning the calibration test will continue to retain the last fan's AC power ON. set frequency and calibration set even when the AC power is shut off. If the frequency is changed 1. Select desired frequency from the back of the self calibration test will occur again. transmitter.

1. Lock position: The DC motor has a built-in

NOTE: The auto learning function will only NOTE: The learning frequency function and self. Turn the receiver power on after 5 seconds.

press and hold the '■ (Off)' button to enter the motor will get locked operation and disconnect learning function. Once the fan has detected the power after 30 seconds if interruption occurs. remote controls's frequency, the down light of Please remove obstacles before re-set. 2. Over 45W protection: When the receiver

2. Within 60 seconds of turning AC power on, safety against obstruction during operation. The

will be non-function.

your fan, if applicable, will blink, and the fan blades will start to spin. detects motor power consumption which is NOTE: During self calibration test, the remote greater than 45W, the receiver's power will stop

and operation will be immediately discontinued.

Speed settings for warm or cold weather depend on factors such as room size, ceiling height and number of fans.


NOTE: Wait for the fan to stop before reversing the direction of the blade rotation.


Warm Weather (forward)

A DOWNWARD airflow creates a cooling effect as shown in Figure 18. This allows you to set your air conditioner on a warmer setting without affecting your comfort.

Cool Weather (Reverse)

An UPWARD airflow moves warmer air off the ceiling area as shown in Figure 19. This allows you to set your heating unit on a cooler setting without affecting your comfort.

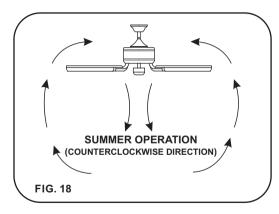

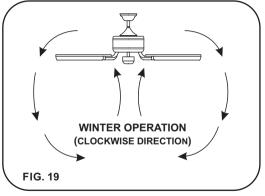

ENJOY YOUR SMART CEILING FAN

NOTE: Before moving on to learning about your new smart ceiling fan, please be sure to test all your fans functionalities using your remote control first.

To enjoy all the potential of your new ceiling fan. You'll need to dowload the BOND HOME app. Available on the Google and Apple Play Store.

You can use the QR code shown in (Fig. 20) to download the app, or you can download the app by visiting https://bondhome_io/app and follow the prompts.

NOTE: Please turn to our "Troubleshooting section" for additional information on your Smart Ceiling Fan.



Scan QR Code

FIG. 20

CARE OF YOUR FAN

Here are some suggestions to help maintain your fan.

- 1. Because of the fan's natural movement some connections may become loose. Check the support connections, brackets and blade attachments twice a year. Make sure they are secure. (It is not necessary to remove fan from the ceiling).
- 2. Clean your fan periodically to help maintain its new appearance over the years. Use only a soft brush or lint free cloth to avoid scratching the finish. Plated finishes are sealed with lacquer to minimize discoloration or tarnishing. Do not use water when cleaning, this could damage the motor, wood blades or possibly cause an electrical shock.
- 3. If your fan is provided with wood veneer blades; you can apply a light coat of furniture polish for additional protection and enhanced beauty. Cover small scratches with a light application of shoe polish.

- 4. Use a lint free lightly damp cloth or duster to remove dust from the blades
- 5. There is no need to oil your fan. The motor has permanently lubricated bearings.
- 6. If your fan is provided with glass shades, clean with lukewarm soapy water and a soft cloth or sponge. DONOT IMMERSE GLASS SHADES IN HOT WATER. DO NOT PUT GLASS SHADES INTO AN AUTOMATICDISHWASHER.

WARNING!

MAKE SURE THE POWER IS OFF AT THE ELECTRICAL PANEL BOX BEFORE YOU ATTEMPT ANY REPAIRS. REFER TO THE SECTION, 'ELECTRICAL CONNECTIONS'.

12

SYMPTOM Fan will not start

SOLUTION

- Check to make sure the wall switch is turned on.
- Check circuit fuses or breakers.
- Caution! Make sure the power is turned off before performing the following steps.
- Remove canopy and check wire connections.
- Check wall control transmitter connections (if applicable).
- Note: Fan must be installed at a maximum distance of 40 feet from the transmitting unit for proper signal transmission between the transmitting unit and the fan's receiving unit.

TROUBLESHOOTING

SYMPTOM Fan Sounds Noisy

SOLUTION

- Allow a 24-hour 'break in' period. Most noises associated with a new fan will go away during this time.
- Make sure the screws that attach the fan blade holder to the motor hub is tight.
- Make sure outlet box is secured to building structure, if necessary use the wood screws provided to further secure outlet box to joist.
- Make sure hanger bracket is secure to the outlet box, screws are tight.

Fan Wobble SOLUTION

SYMPTOM

- NOTE: All blade sets are grouped by weight. Because wood and plastic blades vary in density, the fan may wobble even though blades are matched.
- Make sure outlet box is secured to building structure, if necessary use the wood screws provided to further secure outlet box to joist.
 - Make sure hanger bracket is secure to the outlet box, screws are tight.
 - If a Balancing kit is provided follow the instructions included with the balancing kit to help correct any excessive wobble.

SYMPTOM Fans/Light Turn On and Off Unexpectedly

SOLUTION

steps to change the frequency.

This is caused by interference, Please see "Frequency interference"for

SYMPTOM Frequency Interference SOLUTION

procedure to fail.

- Turn the power off to your ceiling fan.
- Please use a small size tool to change the frequency settings on the control system.
- 3. Return power to the unit.
- 4. Within 60 seconds of turning the Fan's AC power ON. Press the transmitter's 'Stop' button and hold the 'Stop' button for 10 seconds.
- 5. Once the receiver has detected the set frequency, the down light of your fan if applicable will blink twice. (there is no indication if your fan is not equipped with a light).

Note: After the AC power is on, do not press any other button on the transmitter before pressing the 'Stop' button, doing so will cause the

6. The receiver has now learn the frequency which has been selected on the transmitter. After completing the steps above, you shdd be able to operate the ceiling fan and light. If the fan is not responding to the transmitter, please turn the power off to the receiver, and repeat the process.

SOLUTION

Wifi resetting

SYMPTOM

Does not connect to WiFi home network.

the Help Center section in the app under the Settings for additional information and support,

This will clear any wifi settings saved onto the device, and will allow you to reconnect it elsewhere with new wifi settings.

If you are having trouble completing the Bond Home connection with your ceiling fan, adjustments to your router settings may be needed please go to

If you wish to clear the Wifi setting from the app for a specified fan. You may do so by going into the app settings and removing the desired device.


13 SPECIFICATIONS

These are typical readings. Your actual fan may vary. They do not include amps and wattage used by the light(s).

Fan Size	Speed	Volts	Amps	Watts	RPM	N.W.	G.W.	C.F.
56"		120 120	0.04 0.43	2.12 31.72	49 156	6.0 K gs	8.8 Kgs	1.43'



PERFORMANCE AND ENERGY INFORMATION

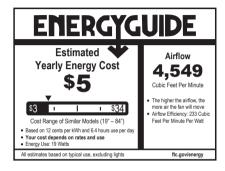

FAN SPEED	AIRFLOW	POWER USE	AIRFLOW EFFICIENCY
	(CFM)*	(Watts)	(CFM/Watt)
Low	2082	2.12	982
High	6727	31.72	212

Ceiling fan airflow is measured in cubic feet per minute (CFM). Power use is measured in watts. To maximize energy savings:

- Choose a fan with high airflow efficiency (CFM/watt).
- Use ENERGY STAR® rated bulbs in your fan.
- Switch off your fan when you leave the room.

* Measure according to the DOE approved test method.

MINKA

AIRE

For any additional information about your Minka Aire Ceiling fan, please write to: