

INSTALLATION INSTRUCTIONS

Item# N1868-760

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
VERTISEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig. 1)

1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts in a clean area. Ensure not to misplace any small parts necessary for installation.
3. Your fixture is supplied with two types of chain, in 3 different length. The one set (ch3) is for main canopy that connects to sub canopy and the other 6x sets (ch1) and (ch2) are for sub-canopy assembly connect to the fixture's body frame.
4. To begin assembly of your fixture, first thread the fixture's loop (K) onto all thread (1). Then take the chain (ch1) and (ch2) with wire and feed wires through holes of the loop (2) and sub canopy (L).
5. Hook the 6x sets of chain (ch1) and (ch2) to sub canopy assembly and fixture 1st and 2nd tier frame assembly. Note: The chain (ch2) is connected to bottom tier and the chain (ch1) connected to top tier

HANGING THE FIXTURE (Fig. 2)

7. Thread all thread (D) into ceiling loop (F) until snug.
8. Thread other end of all thread (D) into crossbar. Note: The length of all thread (D) into crossbar maybe adjusted if necessary.
9. Use lock washer (B) and hex nut (E) to secure all thread (D) to crossbar (A).
10. Take crossbar assembly and mount to junction box (JB) "not provided" with 8-32 mounting screws. The side of crossbar (A) marked with "GND" must be face out.
11. Determine the desired hanging height and discard the excess chain. Note: 2x quick links are provided and this must attach to both ends of chain (I).
12. Open quick link (G) and connect to loops (F/K). Then close the quick link.
13. Slip canopy (H) and collar ring (J) over quick link (G) and allow them to rest in fixture loop (K).
14. Feed fixture wires through ceiling loop (F) and crossbar assembly and all thread (D).

CONNECTING THE WIRE (Fig. 3)

15. Connect the electrical wire as shown in Fig. 3, making sure that all the wire connectors are secured. If your junction box has a ground wire (green, or bare copper), connect the fixture's ground wire to it. Otherwise connect the fixture ground wire directly to the crossbar (A) using green screw provided.
16. Tuck wire connections neatly into junction box (JB).
17. Raise canopy (H) over ceiling loop (F) and secure with collar ring (J).

FINISHING THE FIXTURE (Fig. 1).

18. Install the 22x E12 base light bulbs (LB) up to 60 watts each or CFL or LED equivalent (not included) in accordance with the fixture specification.

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!
(NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)

Your installation is now complete. You can now turn the power ON and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

FIG. 1

Set# A-
 -Crossbar
 -Ground screw
 -Mounting Screw *2



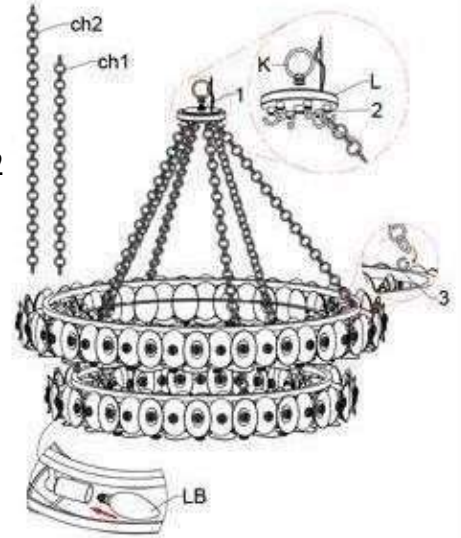


FIG. 2

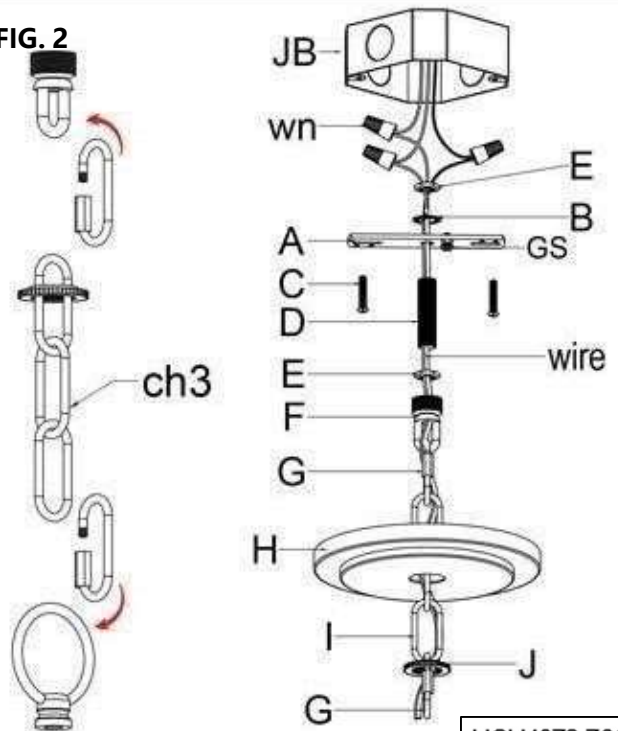

HCH4072-760

Fig. 3

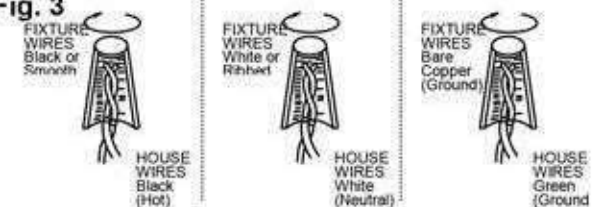

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

