INSTALLATION INSTRUCTIONS

For Chain Hung Light Fixtures (Rev. 05/08/2012) **READ AND SAVE THESE INSTRUCTIONS**

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

HANGING THE FIXTURE (Fig. 1)


- 1. Shut off power at the circuit breaker and remove old fixture from ceiling, including the old crossbar.
- 2. Carefully unpack new fixture and lay all the parts on a clear surface.
- 3. Thread Nipple into Loop until snug.
- 4. Thread other end of Nipple with Loop attached into crossbar until snug.
- 5. Place Lock Washer over end of Nipple protruding through crossbar and thread Hex Nut onto nipple until tight.
- 6. Take this crossbar assembly and mount to ceiling junction box with junction box screws. Tighten screws securely with screwdriver. The side of the crossbar marked "GND" must face out.
- 7. Use a pair of pliers to open one end link of the chain provided, and connect to the fixture loop. Close the link.
- 8. By measuring, determine correct number of links needed for proper hanging height. Using pliers, disconnect and discard remaining chain.
- 9. Lace the fixture wires through the chain.
- 10. Slip Loop Collar over the chain, then do the Same with the canopy.
- 11. Open the other end link of the chain and hang the fixture on the loop at the ceiling. Close the chain link.
- 12. Feed the fixture wires through the loop and Nipple and pull until taut.


CONNECTING THE WIRES (Fig. 2)

- 13. At this point, connect the electrical wire as shown in figure 3, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's Ground Wire to it. Otherwise, connect the fixture's Ground Wire directly to the crossbar using the Green Screw provided.
- 14. Tuck these wire connections neatly into the ceiling junction box and then raise the canopy all the way to the ceiling. Raise the Lock Collar and thread onto ceiling Loop protruding through canopy.
- 15. Install the light bulbs in accordance with the fixture's specifications. (DO NOT EXCEED THE MAXIMUM WATTAGE RATING!). (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)

Your installation is now complete. Return power to the outlet box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

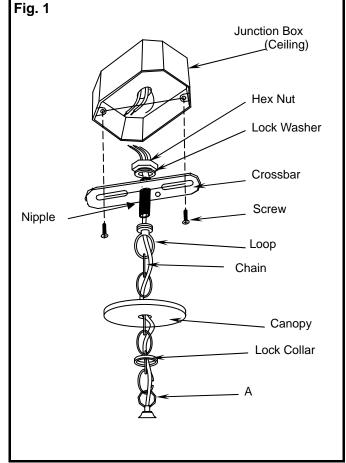

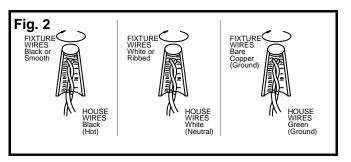





Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

LA-114E