INSTALLATION INSTRUCTIONS

For Models #P5746

f Warning! Shut power off at fuse or circuit breaker.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

HANGING THE FIXTURE (Fig. 1)

- 1. Shut off power at the circuit breaker and remove the old fixture including the mounting hardware.
- 2. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.
- 3. Loosen set screw (F) on canopy coupling (E) using allen wrench (G) provided. Slip canopy onto the fixture body (H).
- 4. Determine desired distance from ceiling to hang the fixture and adjust the strain relief bushing (A) by pushing the cord through the holes until about 6" of cord is exposed. Cut and discard the excess cord if necessary. The fixture can now hang from the strain relief bushing (A).
- Attach crossbar (B) to the junction box (not included) with outlet box screws (C). The side of the crossbar marked "GND" with two convex points must face out.

CONNETING THE WIRES (Fig. 2)

- 6. Connect the electrical wires as shown in Figure 2, making sure that all wire connectors (D) are secured. If your junction has a ground wire (green or bare copper), connect fixture's ground wire to it. Otherwise, connect fixture's ground wire directly to the crossbar (B) using the green screw provided.
- 7. Raise canopy (E) to crossbar (B) and twist on until secure.
- 8. Tighten set screw (F) on canopy coupling (E) with allen wrench (G) provided.
- Install (1) one medium base bulb (I) up to 75 watts each or CFL or LED equivalent (not included) in accordance with the fixture specification—DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).
- 10. Your installation is now complete. Return power to the junction box and test the fixture.

To straighten the cord, please use a blow dryer (not included) if necessary.

IMPORTANT: FIXTURE SHOULD BE INSTALLED BY A QUALIFIED ELECTRICIAN TO ENSURE PROPER WIRING AND INSTALLATION.





