

INSTALLATION INSTRUCTIONS FOR P845-077-L

For LED Ceiling

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DO DISJONCTEU

ASSEMBLING THE FIXTURE (Fig.1)

1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts in a clear area. Take care not to misplace any small parts necessary for installation.
3. Unscrew nuts (G) and remove the washers (E) to remove the mounting plate (A) from the canopy (F).
4. Attach the mounting plate (A) to the junction box (not included) using the mounting screws (B) (size 8#-32N 1"). Note: The side of the mounting plate marked "GND" must face out.

CONNECTING THE WIRES (Fig. 2)

5. Connect the electrical wires as shown in Fig.2 making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate (A) using the green screw provided. Tuck wires back into the outlet box.

FINISHING THE INSTALLATION (Fig.1)


6. Attach the canopy (F) into the mounting plate (A) with nuts (G) through the washers (E).
7. Put the glass (H) on to the canopy (F). The side with crystal sand must face toward the canopy (F).
8. Align the gasket (J) with the hole in the glass (H).
9. Screw in the finial (I) to secure the glass (H). Do not over tighten.

Your installation is now complete. Return power to the junction box and test the fixture.

CAUTION/ATTENTION: When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the frame only.

IMPORTANT: Fixtures should be installed by a qualified electrician to ensure proper wiring and installation. Dimmable with ELV and/or LED compatible wall dimmer switches.

Fig.1

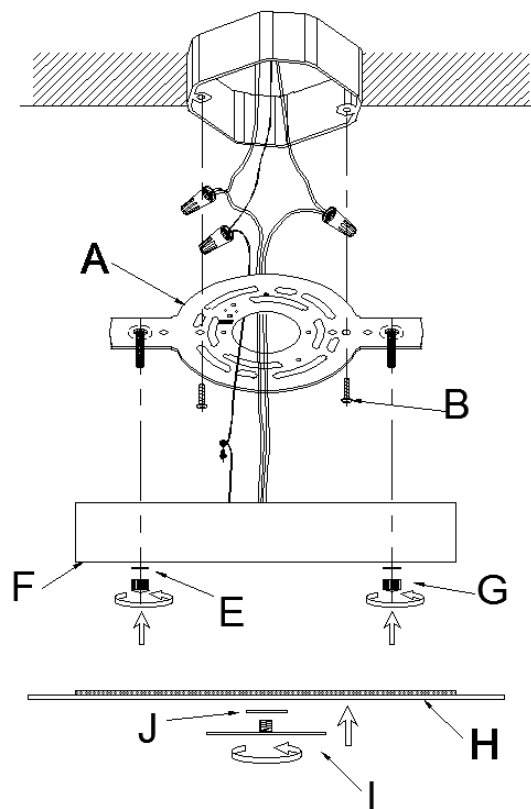

Set# A-020-200

-mounting plate

-Ground Screw

-Mounting Screw*2

Fig.2

FIXTURE WIRES BLACK OR SMOOTH	FIXTURE WHITE OR RIBBED	FIXTURE GREEN OR BARE COPPER (GROUND)	
HOUSE WIRES BLACK (HOT)	HOUSE WIRES WHITE (NEUTRAL)	HOUSE WIRES GREEN OR BARE COPPER (GROUND)	

INSTALLATION INSTRUCTIONS FOR P845-077-L

For LED Ceiling

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DO DISJONCTEU

LED module replace (Fig.3)

Shut off power before replacing

1. There is one (1) LED module on this fixture. If it does not work, replace it as shown in Fig. 3. Make sure the power is off before you replace.
2. Unscrew the finial (I) and remove the gasket (J) and the glass (H).
3. Unscrew nuts (G) and remove washers (E). Disconnect the wires from the junction box.
4. Use a pin to press down on the quick connector (K) to disconnect the wires.
5. Unscrew the screws (W) and remove gaskets (L).
6. Replace a new module.
7. Repeat steps 5-1 to reassemble the fixture.

Your installation is now complete. Return power to the junction box and test the fixtures.

Fig 3

