

INSTALLATION & OPERATING INSTRUCTION for# WC105

Ceiling Fan Slide Wall Control (Rev. 11/ 28/00)

READ AND SAVE THESE INSTRUCTIONS

WARNING ! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

1. SAFETY PRECAUTIONS:

- WARNING:** To avoid fire, shock, and serious personal injury, follow all instructions carefully. Read your Owner's Manual carefully before installing the ceiling fan control. Retain Owner's Manual for future reference.
- To avoid possible electrical shock, be sure electricity is turned off at the main fuse box or circuit breaker panel before wiring.
 - This control is designed to operate one ceiling fan only and no accessory light kit. This wall control is rated for 1.25 amps at 120 volts. **If your ceiling fan is equipped with a variable speed pull chain switch control, make sure to set the speed control at the highest speed before installing the wall control. This will avoid erratic speeds and possible damage to your ceiling fan.**
 - Make certain no bare wires are exposed outside the connectors.
 - All wiring must conform to National and Local Electrical Codes. If you feel you do not have enough electrical wiring knowledge or experience, have your fan control installed by a licensed electrician. Any electrical work not described in this manual should be performed by a licensed electrician.
 - Use of this control with some ceiling fans could result in fire, shock and serious personal injury. Use this fan control only with capacitor speed controlled ceiling fans only.

INSTALLATION

- After electricity has been turned off at the main fuse box or circuit breaker panel, remove the existing wall plate and switch.
- Proceed to make the wire connections as follows; (make sure the switch is in the "OFF" position). Connect one of the Black wires from the WC105 wall control to the fan lead wire. Connect the second Black wire from the WC105 wall control to the 120v AC hot wire. Use wire connectors provided to secure the connections.

If your outlet box has a ground wire (green or bare copper) , connect the wall transmitter's ground wire to it; otherwise connect the wall transmitter's ground wire directly to one of the screws from the outlet box.

NOTE: Refer to the Schematic on the back to the wall control.

- Secure the WC105 wall control to the outlet box using the two 6-32" x 3/4" screws provided.
- Secure the face plate over the WC105 wall control with the two 6-32" x 1/4" screws provided.

WARNING! HOOK UP "IN SERIES" ONLY!

Do not connect to hot and common wire of electric circuit or switch will be damaged. Refer to diagram below

Fig. 1

