WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER. AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

MOUNTING THE FIXTURE (FIG. 1)

- 1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the existing fixture and its mounting hardware from the ceiling.
- **2.** Carefully unpack your new fixture and lay out all the parts in a clear area. Take care not to lose any small parts necessary for installation.
- 3. Attach the mounting plate (B) to the outlet box using the outlet box screws (C). The side of the mounting plate marked "GND" must face out.

This fixture could be installed in two ways: If installed as mini-pendant:

- 4. Determine the rod length if necessary, thread rod(F1,F2) into coupling(I) and assemble loop(H) onto the top end of the rod. Pass the wires carefully through each rod as your assemble.
- 5. Attach quick link (G) to loop (H) and loop (O) on canopy (D). Carefully feed the wire through loop (H), quick link (G), and loop (O).
- 6. Assemble the glass shade (J) & (L) over the socket (K) and secure with socket ring (M). Do not over tighten.
- Install(1) one medium base bulb (N) up to 60 watts or CFL or LED equivalent (not included)in accordance with the fixture's specifications.(DO NOT EXCEED THE MAXMUM WATTAGE RATING!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).


If installed as semi-flush:

- 8. Remove the small loop (O) from the canopy (D).
- 9. Thread the pipe (F) into the coupling (I), then install canopy (D), metal washer (P), lock washer (R), ground wire terminal (S) and lock washer (R) over the top end of the pipe (F) and secure with hex nut(Q).
- 10. Repeat step 6&7.

CONNECTING THE WIRES (FIG.2)

- Connect the electrical wires as shown in Fig.2 making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect fixture's ground wire to it. Otherwise, connect fixture's ground wire directly to mounting plate using green screw provided.
- 2. Tuck wire connections neatly into outlet box.
- 3. Attach the fixture main body onto outlet box by protruding mounting screws (A) through mounting holes on the canopy (D)and secure with ball nut (E).

Your installation is now complete. Return power to the outlet box and test the fixture.

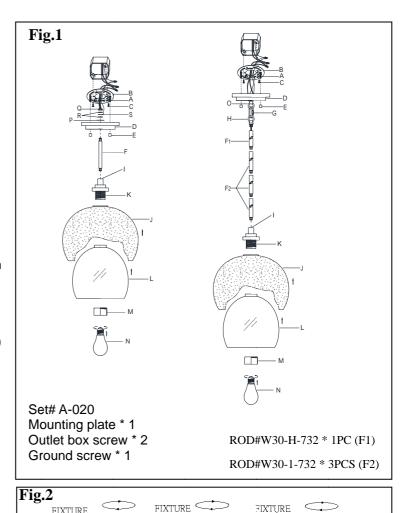

Note: Illustration (Fig. 1) & (Fig.2) on this manual is forinstallation purposes only. It may or may not be identical to the fixture purchased.

HOUSE

WHITE

(NEUTRAL.)

WIRES

BARE

COPPER

GREEN OR

(GROUND)

WIRES GREEN OR BARE

COPPER

(GROUND)

WIRES

WHITE OR

RIBBED



FIXTURE WIRES

BLACK OR

HOLISE

BLACK

(HOT)

SMOOTH

