

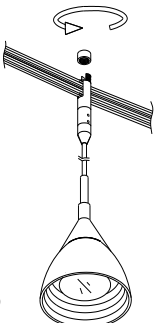
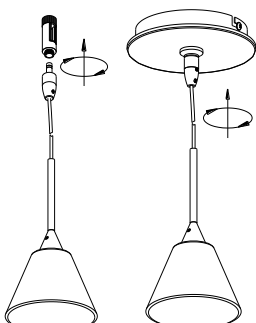
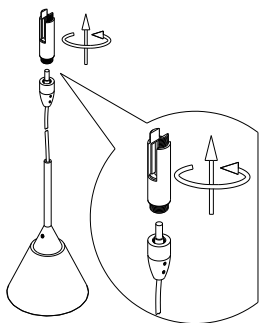
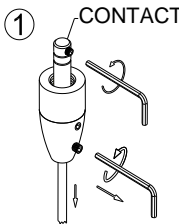
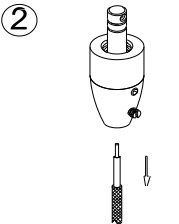
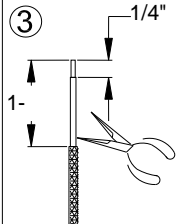
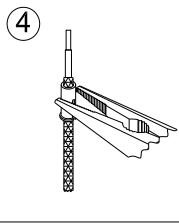
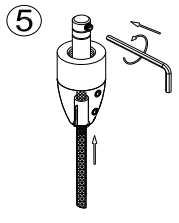
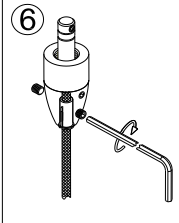


# Installing The Mini Pendant GKTH1000

This mini pendant uses the quick adapter to attach to the rail or canopy. This mini pendant is suited for series 1 glass shade. Follow the step-by-step instructions below.

					
<p><b>Step 1.</b> Mini pendant head GKTH1000.</p>	<p><b>Step 2.</b> Install the glass shade and insert the bulb.</p>	<p><b>Step 3.</b>  <u>Optional A.</u> Install the mini pendant into the rail: Unscrew the fixture cap and slide the mini pendant into the rail and secure with the fixture cap. The connection must be tight and secure.  <u>Optional B.</u> Install the mini pendant into the canopy: Unscrew the rail connector at the top of mini</p>		<p><b>Step 4.</b> To adjust the length for wire: remove the standoff completely. Then follow the step as bellow.</p>	
			<p>1. Remove set screw on contact. Back out the lower set-screw.                  2. Withdraw cable.                  3. Use a wire cutter cut to desired length. Strip away cable and braided sleeve 1-1/4", Trim 1/4" of plastic insulation exposing bare wire.                  4. To prevent lower set screw from penetrating inner wire causing short, secure brass cover (included) over braided wire using pliers to crimp.                  5. Reinsert cable into contact making sure the rabbet on the brass tube are vertical with lower set-screw hole, then tighten set screw and let set screw contact with exposed wire. Pull gently down along the braided cable to smooth out any wrinkles.                  6. Use care not to move the cable position and tighten two lower set-screws first. Be careful not to pierce the insulation by over tightening.</p>		
			<p><b>IMPORTANT: FIXTURE SHOULD BE INSTALLED BY A QUALIFIED ELECTRICIAN TO ENSURE PROPER WIRING AND</b></p>		

