

INSTALLATION INSTRUCTIONS CH-3

For Chain Hung Light Fixtures (New 10/07/2012)

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

IMPORTANT:

For a safe and secure installation, these fixtures must be installed by means of support that are independent of the outlet box.

SUGGESTED INSTALLATION: (Fig. 1)

1. Provide a 1/4 IPS pipe with one end securely mounted to a beam or a structural member. The other end should protrude through the center of the outlet box as shown.
2. Assemble the ceiling loop, nipple, nuts and hickey to center 1/4 IPS support pipe and adjust overall length to allow the ring to hold the canopy flush to the ceiling. When the adjustments have been completed, secure the three nuts, as shown.
3. Use a pair of pliers to open one end link of the chain provided, and connect to the loop. Close the link.
4. By measuring, determine correct number of links needed for proper hanging height. Using pliers, disconnect and discard remaining chain.
5. Lace the fixture wires through the chain links.
6. Slip the lock collar and canopy over the upper end of the chain.
7. Attach the Fixture Loop (C) to the top of the fixture. Place Bracket (D) into Loop (C) and then place the chain end link into Bracket (D), secure with Cross Pin (A) and Hitch Pin (B).
8. Lace the fixture wires, ground and safety cable through the chain and loop, exiting through the side of hickey. Run cable through the top of the outlet box and secure to structural member.

CONNECTING THE WIRES (Fig. 2)

9. At this point, connect the electrical wire as shown in figure 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixtures Ground Wire to it. Otherwise, connect the fixture Ground Wire directly to the crossbar using the Green Screw provided.
10. Tuck these wire connections neatly into the ceiling junction box and then raise the canopy all the way to the ceiling. Raise the Lock Collar and thread onto ceiling Loop protruding through canopy.
11. Install the light bulbs in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**

Your installation is now complete. Return power to the junction box and test the fixture.

Fig. 1


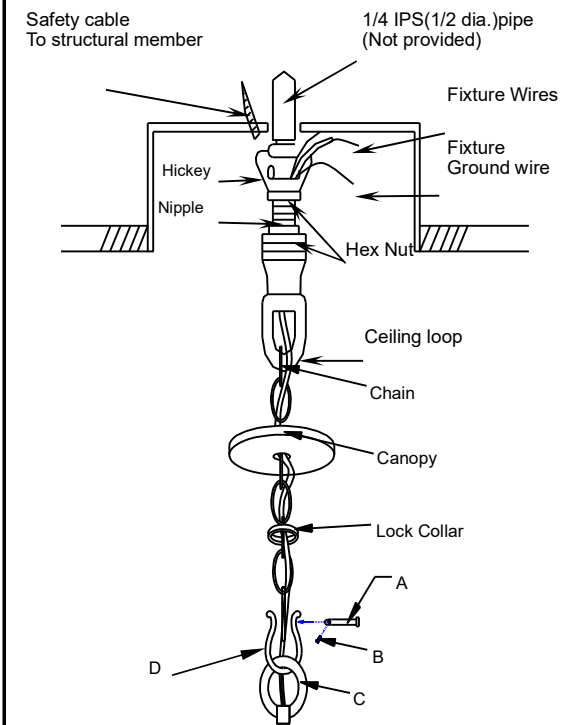


Fig. 2

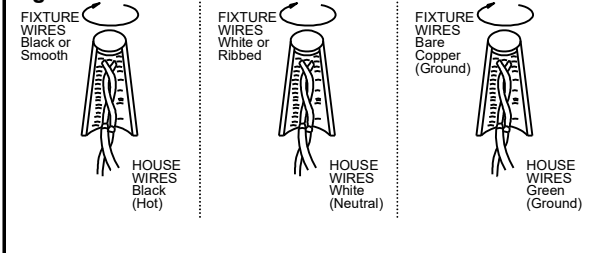

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

LA-592E