

# INSTALLATION INSTRUCTIONS FOR N6943-575

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .**

**AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

## PREPARATION (Fig. 1)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the existing fixture and its mounting hardware from the ceiling.
2. Carefully remove the fixture from the carton and check that all parts are included as shown in the illustration.

## HANGING THE FIXTURE (Fig.1)

1. Thread nipple (F) into ceiling loop (G).
2. Thread the other end of the nipple (F) with ceiling loop (G) attached to the crossbar (D) until snug.
3. Place lock washer (Q) and hex nut (P) onto the end of the nipple (F) protruding through the crossbar (D). Then thread the hex nut (P) until snug.
4. Take this crossbar assembly and mount to the outlet box (A) using screws (E) (size: #8-32\*0.5"L). The side of the crossbar marked "GND" must face out.
5. Attach the chain (K) to the fixture loop (M) using quick link (L). The quick link (L) must be completely closed when installed.
6. By measuring, determine the correct number of links needed for the desired hanging height. Use a pair of chain pliers to disconnect and discard any excess chain.
7. Slip the lock collar (J) and canopy (I) over the chain. Allowing them to rest on the fixture loop (M).
8. Then attach the other end link of the chain (K) to the ceiling loop (G) using the other quick link (H). Thread the quick link (L) closed.
9. Carefully lace the fixture wires through the chain (K) and pull tight.
10. Feed the fixture wires through the ceiling loop (G) and Nipple (F) and pull tight.

## CONNECTING THE WIRES (Fig. 2)

11. At this point, connect the electrical wire as shown in figure 2, making sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixtures ground wire to it. Otherwise, connect the ground wire directly to the crossbar using the green screw provided. Then tuck the wire connections neatly into the ceiling outlet box.

## COMPLETING THE INSTALLATION (Fig. 1)


12. Raise the canopy (I) to the ceiling. Then raise lock collar (J) and thread onto ceiling loop (G) protruding through the canopy (I).
13. Place the candle covers (O) over the sockets.
14. Install light bulb (N) (not included) in accordance with the fixture's specifications. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**

Your installation is now complete. Return power to the junction box and test the fixture


**Fig.1**

Set-Mounting # A-014

- Crossbar (1)
- Green screw (1)
- Mounting screw (2)

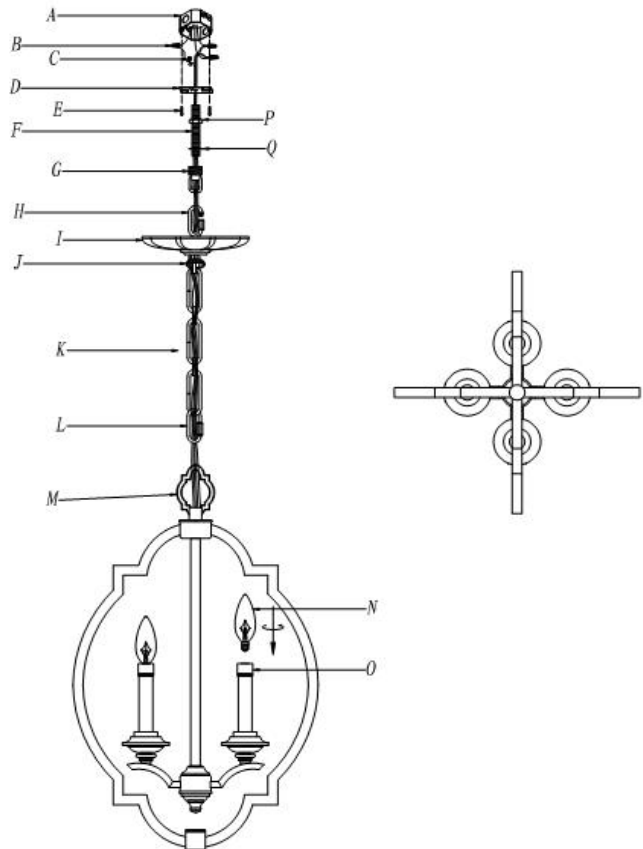

**Fig.2**

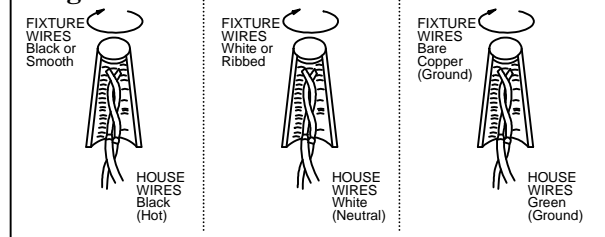

Notice: It is important to use proper chain pliers (not included) to OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

