

INSTALLATION INSTRUCTIONS

Item# P1202-287-L (New. 2022/02/24)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig.1 / Fig.2)

1. Shut off power at the fuse box or circuit breaker. If necessary, remove the old fixture including the mounting hardware.
2. Carefully remove the fixture from the carton and check that all parts are included as show in Figure 1.
3. Unscrew screws (C) and plastic washers. Separate mounting plate (A) from fixture (D).
4. Attach mounting plate (A) to junction box (not included) with junction box screws (B) (size: 8-32*1/2"L). The side of the mounting plate marked "GND" must be face out.

CONNECTION THE WIRES (Fig. 3)

5. Connect the electrical wires as shown in Fig.3, making sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate (A) using the green screw provided. Tuck wire connections neatly into junction box.

FINISHING THE INSTALLATION (Fig.1 / Fig.2)

6. Align fixture (D) onto mounting plate (A) and secure with screws (C) and plastic washers. (Please follow the arrow located inside the fixture back plate marked "This side up" when the fixture assembly as wall mount function as fig1)
7. To prevent moisture from entering the junction box and causing a short circuit, use clear caulking (i.e. Indoor/Outdoor silicone sealant) to outline the outside of fixture back plate where it meets the wall leaving a space at bottom to allow moisture a means to escape (Fig.4).

Your installation is now complete. Return power to the junction box and test the fixture.

CAUTION /ATTENTION: When handling the fixture, do not apply pressure to the LED. Hold the fixture by the base or back plate only.

Replacing LED module (Fig. 5)

The LED module can be replaced by a qualified electrician without cutting of wire and without damage to any decorative element to which the fixture is attached. See installation steps for more details (Fig. 5)

Warning: Turn off power at the circuit breaker before replacing LED module.


- a. To remove the fixture from the wall, loosen screws (C) and plastic washers, remove the wire connectors and place the fixture on a clear flat surface.
- b. Loosen hex nuts (E) to separate fixture (N) from back plate (F).
- c. Loosen screws (L), and remove rubber washers (M). Separate glass panel (K) from LED housing (H).
- d. Loosen screws (I) and hex nuts (G). Carefully remove the LED module (J) from LED housing (H).
- e. Reverse steps a-d for installing the new LED module.

Note: The LED module should be provided by a specified supplier.

IMPORTANT: Fixture should be installed by a qualified electrician to ensure proper wiring and installation.


Dimmable with ELV and/or LED compatible wall dimmer switches.

Fig. 1 Wall Sconce

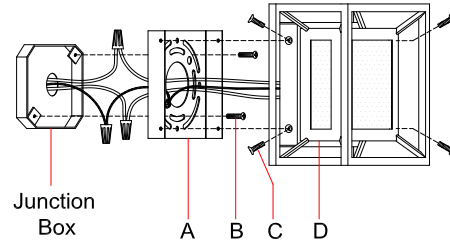

Set# A-021-117110
 - Mounting Plate
 - Ground Screw
 - Mounting Screw*2

Fig. 2 Ceiling Mount

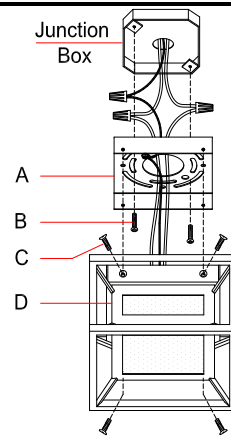

Set# A-021-117110
 - Mounting Plate
 - Ground Screw
 - Mounting Screw*2

Fig. 3

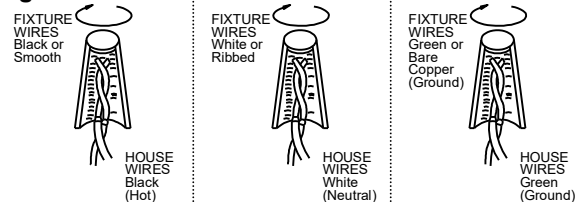


Fig. 4

