# INSTALLATION INSTRUCTIONS

Item#2186-695 (New. 06/26/2021)

**READ AND SAVE THESE INSTRUCTIONS** 

# f WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

# AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

#### PREPARATION (Fig.1&Fig. 3)

- 1. Shut of power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
- 2. Carefully unpack your new fixture and lay out all the parts in a clean area. Take care not to misplace any small parts necessary for installation.
- 3. Place center rod (K) on fixture body (C) and secure with screws (J), carefully pass wires through center rod (K) as you assemble.
- 4. Determine desired hanging height and thread rods (F1, F2 and F3) to all thread (I) of fixture body. Screw loop (H1) onto rod (F1). Carefully pass wires through each rod as vou assemble.
- 5. Attach quick link (G) to loop (H1) and loop (H2) on the canopy (D). Carefully feed wire through loop (H1), quick link (G), and loop (H2).
- 6. Attach mounting plate (A) to junction box (not included) with mounting screws (B) (Size: #8-32N\*L0.5"). The side of the mounting plate (A) marked with "GND" and two convex points must face out.

### **CONNECTING THE WIRES (Fig. 2)**

- 7. Connect the electrical wires as shown in fig 2, making sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate (A) using the green screw provided.
- 8. Tuck wire connectors neatly into the junction box.


#### **COMPLETING THE INSTALLATION (Fig. 1)**

- 9. Slide canopy (D) over mounting plate (A) and secure with screws (E).
- 10. Place candle covers (O) over sockets (P).
- 11. Install (6) six candelabra base bulbs (N) up to 60 watts each or CFL or LED equivalent (not included) in accordance with the fixture specification-DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)
- 12. Insert plastic bushing (S) into holes of glass shade (L). Align holes on socket cup (R) and glass shade (L) with threaded holes of mash shade (M), and secure all three holes with studs (Q).

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

## Fig. 1

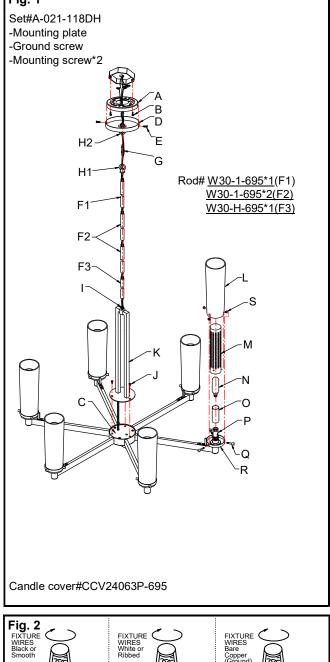



Page: 1/2

