# INSTALLATION INSTRUCTIONS FOR P1780-066A-L、P1780-044B-L For LED Pendant READ AND SAVE THESE INSTRUCTIONS

#### WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER AVERTISSEMENT!COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DO DISJONCTEU

## ASSEMBLING THE FIXTURE (Fig.1)

- 1 Shut off power at the fuse box or circuit breaker. Remove the old fixture including the mounting hardware.
- 2 Carefully remove the fixture from the carton and check that all parts are included as show in Figure 1. Fix the acrylic shade(H) to the Alu shade(N) with PC screw (K) with Allen key provided,don't tootighten..Unscrew (G) to remove the mounting plate (A) from the canopy (F).
- 3 Position mounting plate(A) on the ceiling, and mark the location of the dry wall anchors(W).Pre-drill the holes for the dry wall anchors ,Insert the dry wall anchors(W) into the ceiling ,Attach the mounting plate (A) to the junction box using the mounting screws(B,size 8#-32N 1/2'').The side of the mounting plate marked "GND" must face out.Place the wood screw (T) through the slot hole into the dry wall anchor(W) to secure the mounting plate(A) as shown in Fig. 1.

## CONNECTING THE WIRES (Fig. 2)

4 Pass the black/white and bare copper wires from the hole of the mounting plate (A).Connect the electrical wire as shown in figure 2,making sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), connect the ground wire from the fixture to it. Otherwise connect fixture ground wire (C) directly to the mounting plate using the green screw (D)provided. Tuck the wire connections neatly into the ceiling junction box as you hold the canopy towards the ceiling.


## FINISHING THE INSTALLATION (Fig.1)


6 Adjust the length of the cable to pull or push until the desired length by pushing down the spring nut (S).Fix the canopy(F) into the mounting plate (A) with finial(G)

Your installation is now complete. Return power to the junction box and test the fixture.

CAUTION/ATTENTION: When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the frame only.

IMPORTANT: Fixture should be installed by a qualified electrician to ensure proper wiring and installation. Dimmable with ELV and/or LED compatible wall dimmer switches.

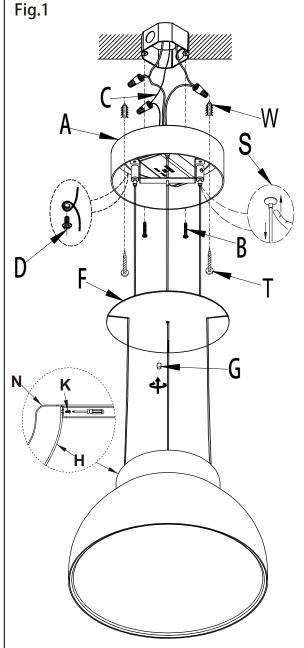

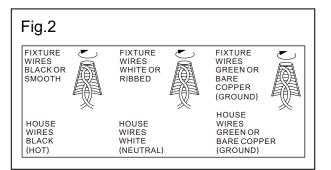



## INSTALLATION INSTRUCTIONS FOR P1780-066A-L、P1780-044B-L For LED Pendant READ AND SAVE THESE INSTRUCTIONS

#### WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER AVERTISSEMENT!COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DO DISJONCTEU

# LED module replace(Fig.3) Shut off power before replacing

- 1:There have an LED module (L) at the top of alu shade, if it does not work ,replace it as shown in Fig. 3.Make sure the power is off before you replace ;
- 2:Twist-off the screw (K) with Allen Key provided, carefully take away the acrylic shade (H).Save these parts for subsequent service.
- 3:Twist the screw(J) in the surface of the LED module , take away the module ,use screw driver press the connector (I),pull out the wire ;
- 5:Replace a new module ;
- 6:Repeat step 5-1 to assemble the fixture.

Your replace is now complete , return power to the junction box and text the fixture

